




Kindle Paperwhite 3rd Generation Motherboard Replacement

Use this guide to replace your Kindle Paperwhite's motherboard if your Kindle is experiencing issues connecting to wireless, or if it is having frequent system malfunctions.

Written By: Micah Smart

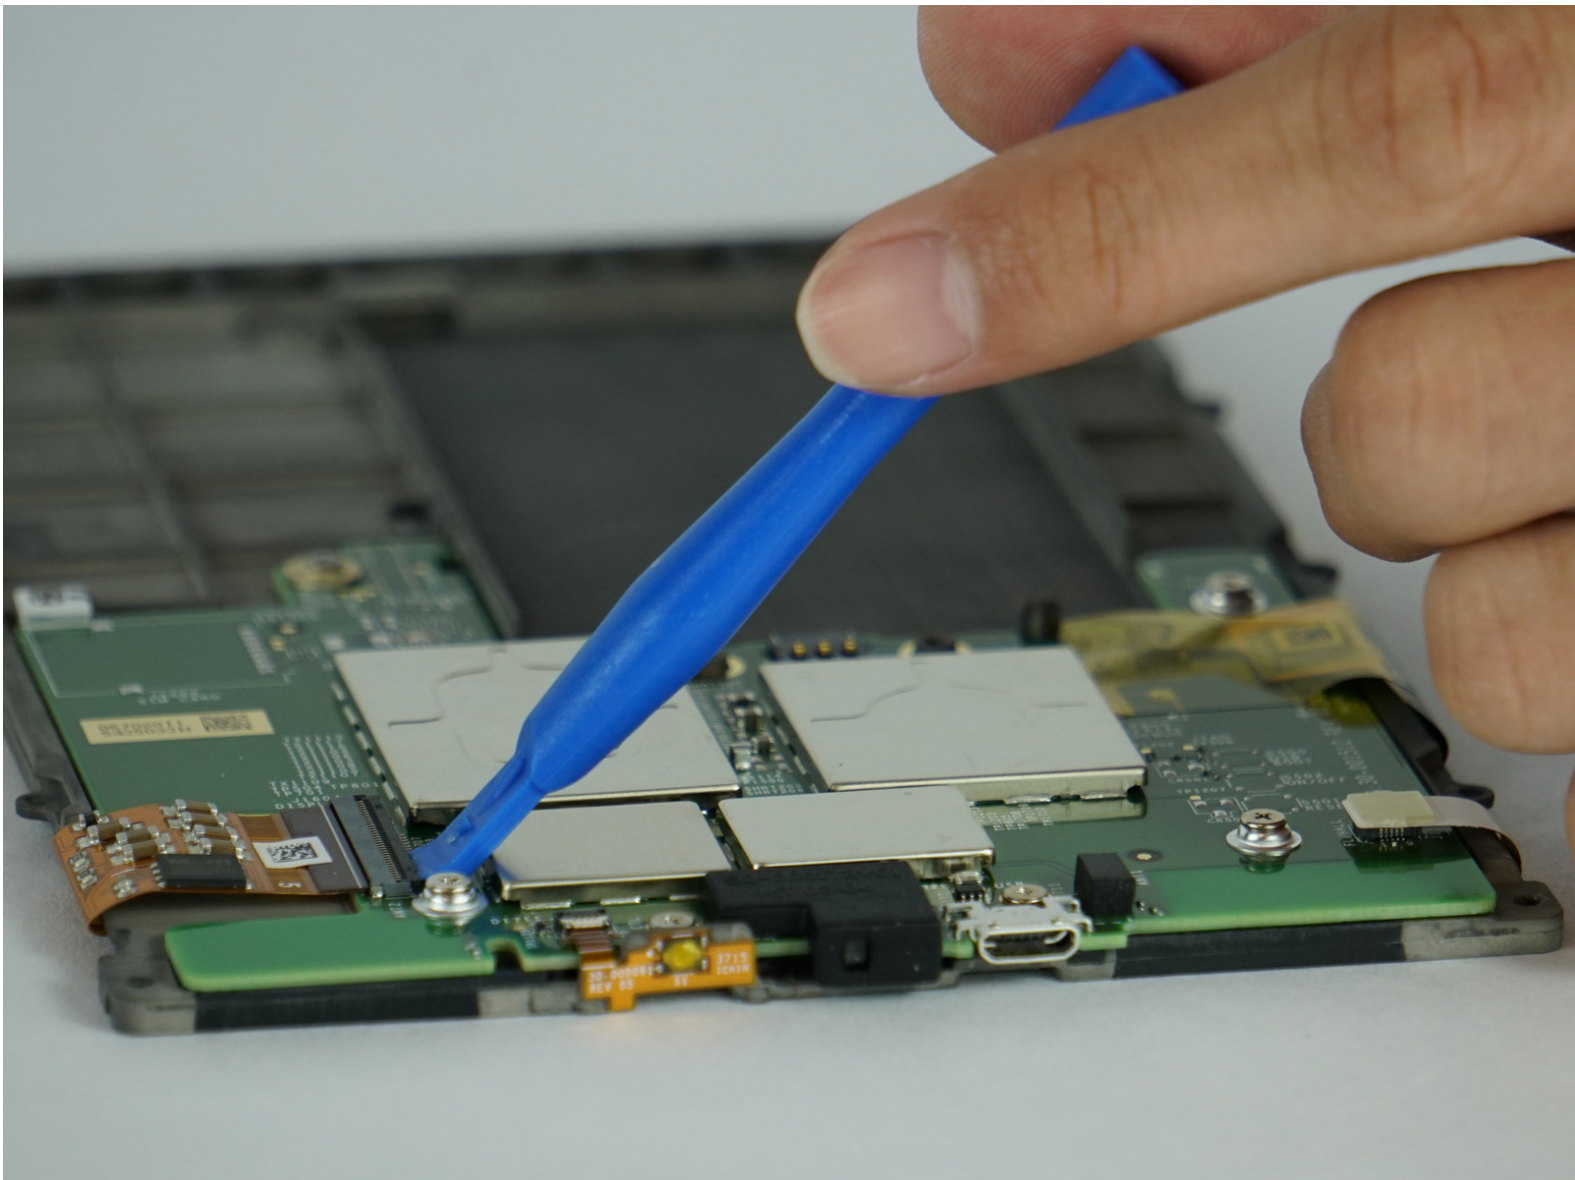

INTRODUCTION

Amazon's Kindle Paperwhite 3rd Generation possesses a GS957661, 3G motherboard. This guide requires that the Kindle is turned off, and that a plastic opening tool, angled precision tweezers, and a PH000 screwdriver are used.




TOOLS:


- [Phillips #000 Screwdriver](#) (1)
 - [Tweezers](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Precision Tweezers Set](#) (1)
 - [Metal Spudger Set](#) (1)
 - [64 Bit Driver Kit](#) (1)
-

Step 1 — Battery




 Ensure that the device is turned off before beginning.

- Gently pry the bezel off the screen using a plastic opening tool. Start at the corners and slide around the edges until you return to your starting point.

 Be careful if using the metal spudger, as it can scratch the surface of the Kindle.

Step 2

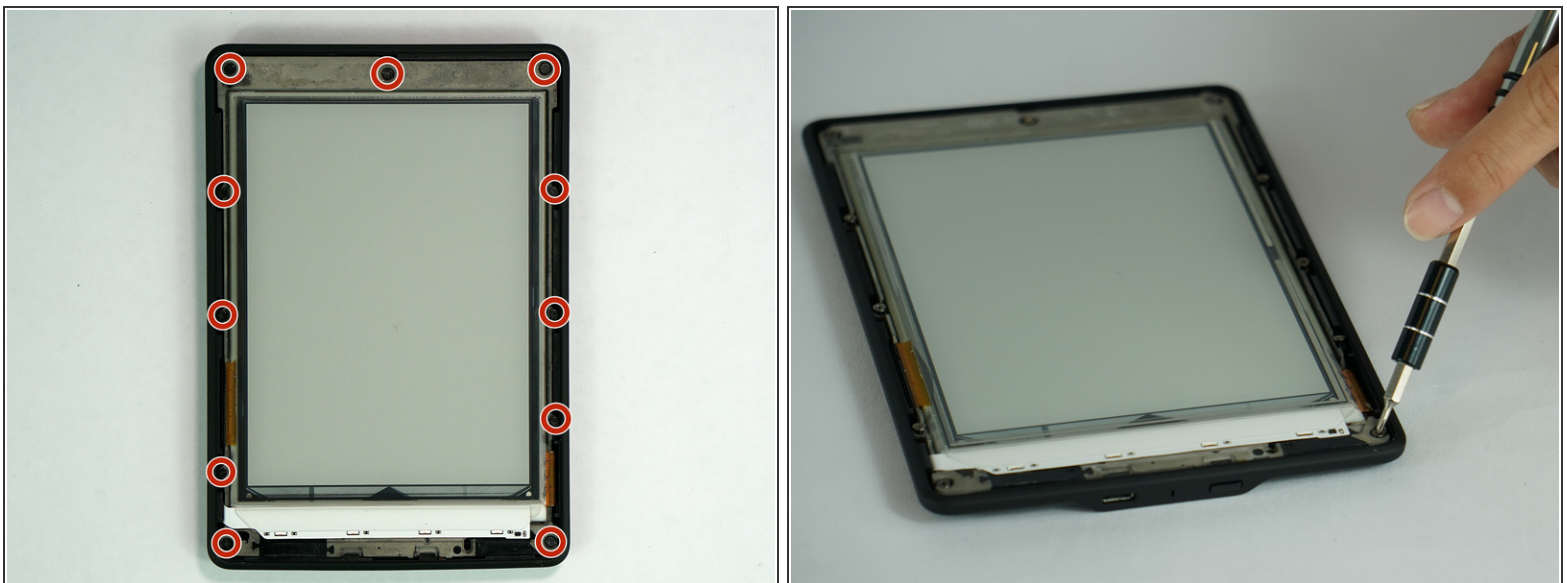

- Unscrew the eleven 3.2 mm Phillips #000 screws surrounding the frame.

Step 3




- Gently lift the mid-frame out of the case with your hands.

Step 4




- Unscrew the three 3.0 mm Phillips #000 screws that are securing the battery.

Step 5

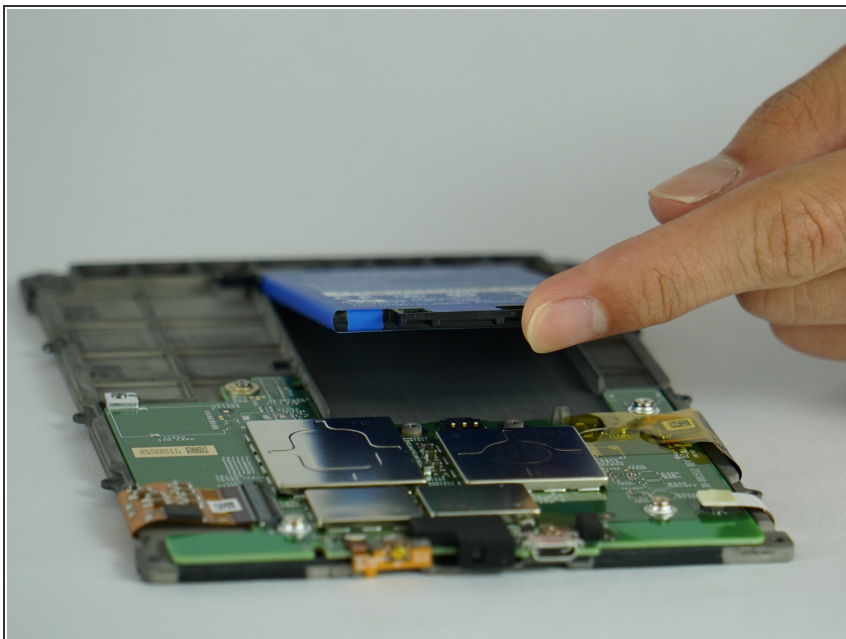


- Gently lift the battery from the frame.

Step 6 — Motherboard

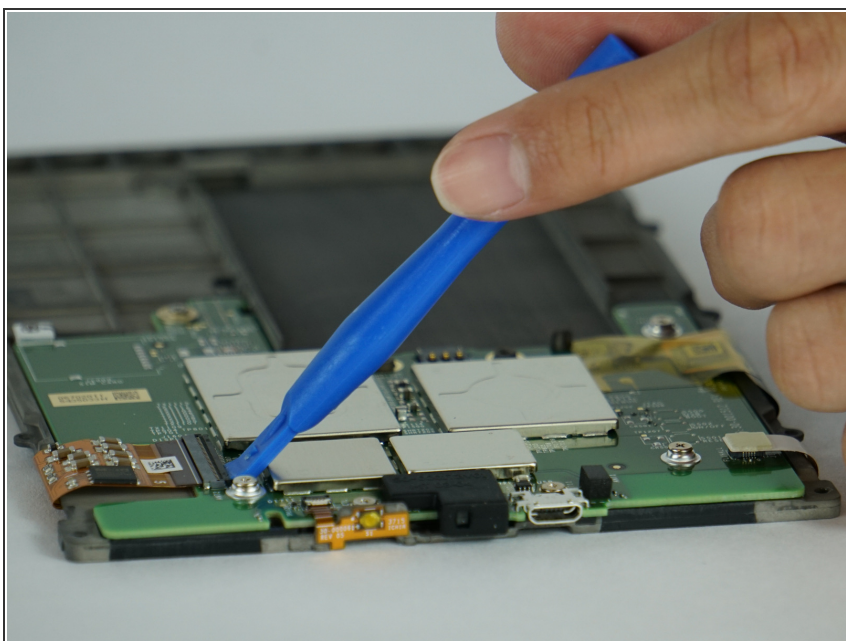



- Flip the black latch with a plastic opening tool, and then gently pull back the orange ribbon cable.

Step 7

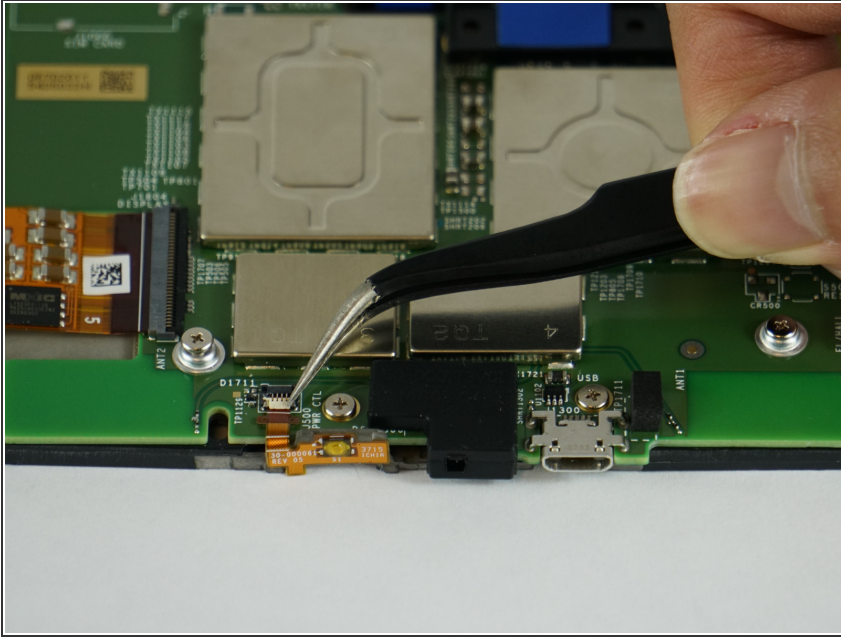


- Flip the tiny off-white latch with angled precision tweezers toward the direction of the battery.
- Gently peel back the orange ribbon cable.

Step 8

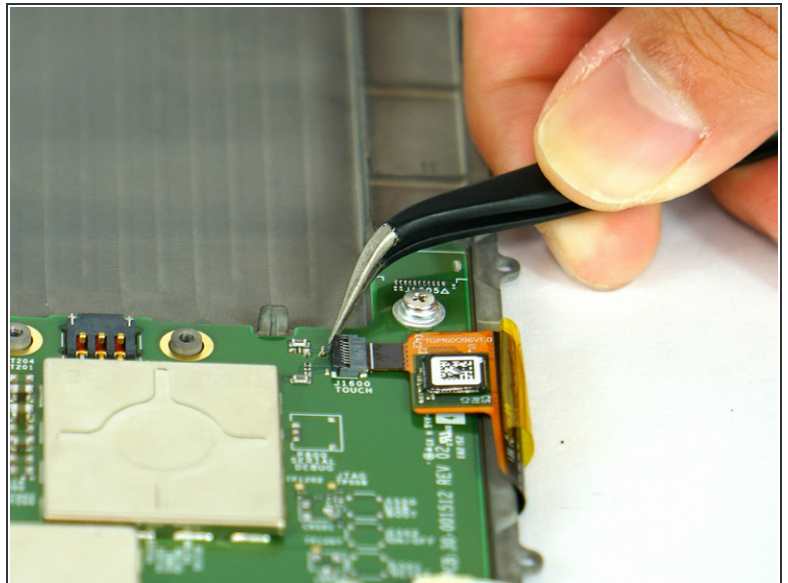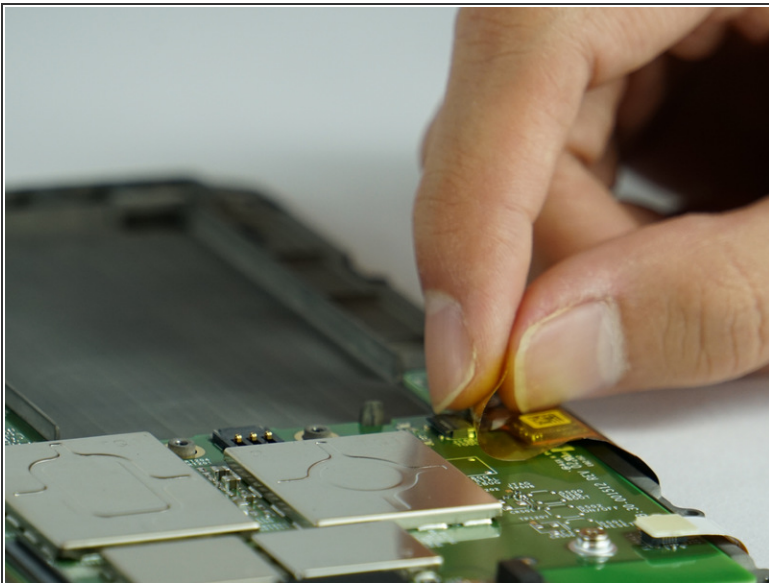


- Peel back the orange ribbon cable near the battery.
- Flip the tiny black latch with angled precision tweezers toward the closest edge of the device.

Step 9

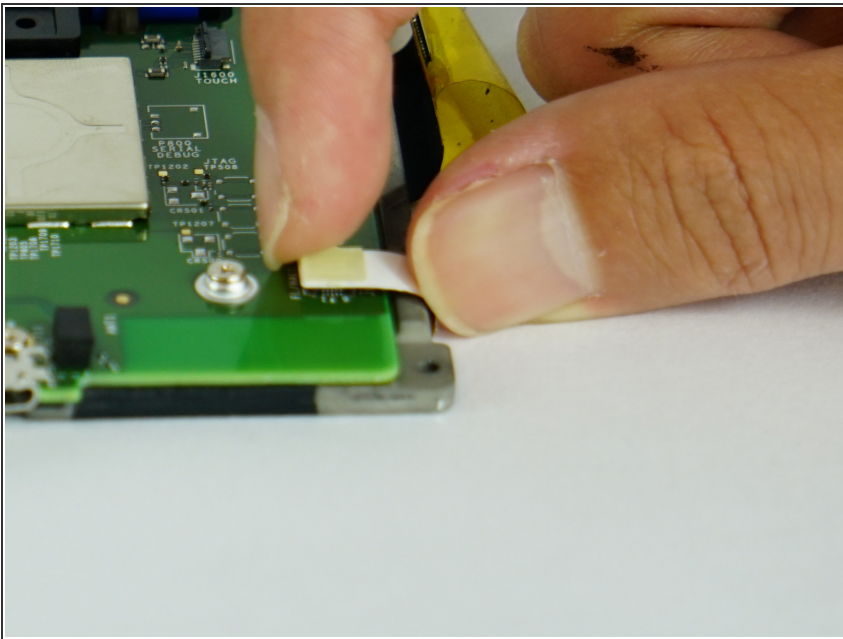


- Peel back the white connector with your fingers.

Step 10

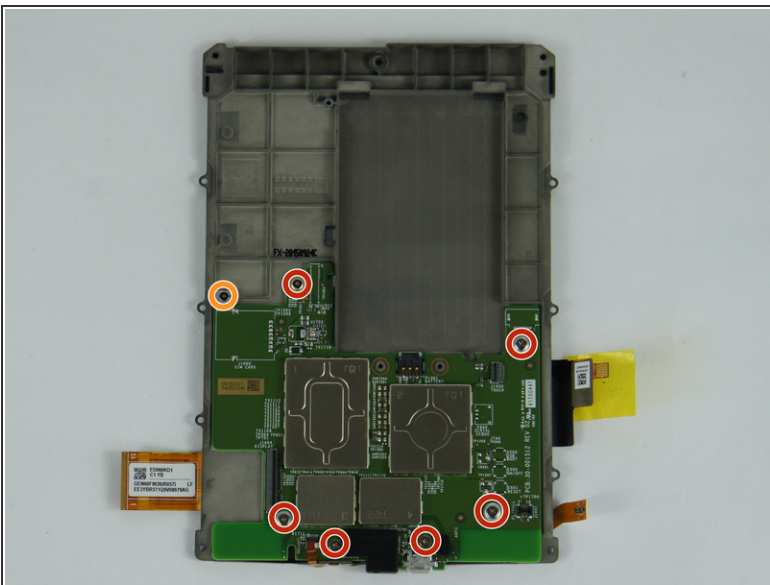

- Unscrew the six 3.0 mm Phillips #000 screws surrounding the motherboard.
 - Unscrew the one 2.5 mm Phillips #000 screw.
- i** There is a little metal plate underneath the 2.5 mm screw and washers under four of the 3.0 mm screws.

Step 11

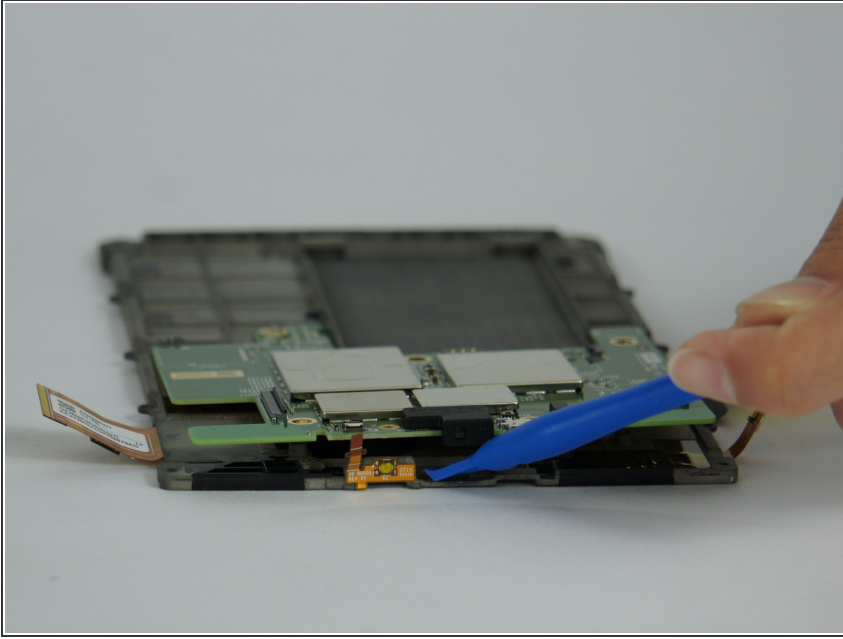

- Use a plastic opening tool to lift the motherboard upwards from the frame.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-30 06:32:18 AM.